



LIVIN HILL

**ASSEMBLY INSTRUCTIONS &
PARTS IDENTIFICATION
MODEL # 2297 - 33KD**

**COLHANE 2 DOOR ACCENT CABINET
WASH FINISH**


Parts key							
No	Code	Qty	Description	No	Code	Qty	Description
1	2297-33KDP54	1 pc	Top	8	2297-33KDP07L	1 pcs	Left Side Facing End Door
2	2297-33KDP51B	1 pc	Bottom Shelf	9	2297-33KDP07R	1 pcs	Right Side Facing End Door
3	2297-33KDP53	1 pc	Front Frame	10	2297-33KDP02	4 pcs	Leg
4	2297-33KDP51L	1 pc	Left Side Facing Side Panel	11	2297KDP51H	4 pcs	Side Panel Hinge
5	2297-33KDP51R	1 pc	Right Side Facing Side Panel	12	2297KDP07H	4 pcs	Door Hinge
6	2297-33KDP08	1 pc	Shelf	13	2297KDP01L	4 pcs	Leveler
7	2297-33KDP38	1 pc	Back Panel	14	2297KDP01D	2 pcs	Door Catch
				15	2297KDP01AT	1 set	Anti-Tip Kit

Hardware Kit 2297-33KDP01

No	Code	Qty	Description	No	Code	Qty	Description
16	2297KDP08P	4 pcs	Shelf Pin	18	2297KDP01S	4 pcs	Wood Screw
17	2297KDP04	2 pcs	Handle w/ Screw	19	2297KDP01W	4 pcs	Plastic washer

PLEASE NOTE: Assembly requires two people. Follow directions step by step.


Step:01

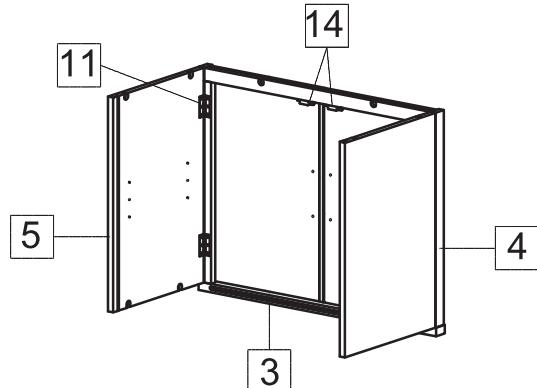

- With the help of the second person, open the front frame assembly positioning the two side panels of the cabinet 90° perpendicular to the cabinet frame.

Step:02

- With two people, carefully bring the bottom rack and gently push it down to make sure it reaches the receiver.
- Make sure that the locking pin is in the opened position for mounting on the bottom rack. Once in place, lock the tabs

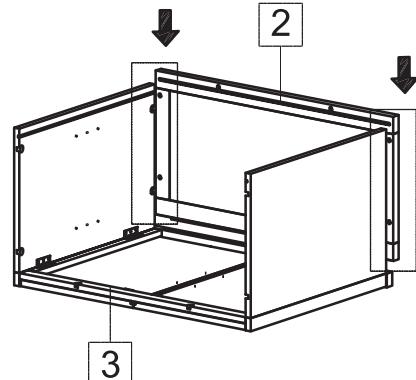




LIVIN HILL

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 2297 - 33KD


COLHANE 2 DOOR ACCENT CABINET WASH FINISH

Step:03


- Carefully insert the back panels into place making sure that the lock tabs are in the open position on the bottom of the back panel.
- Once in place, lock the tabs on the bottom.

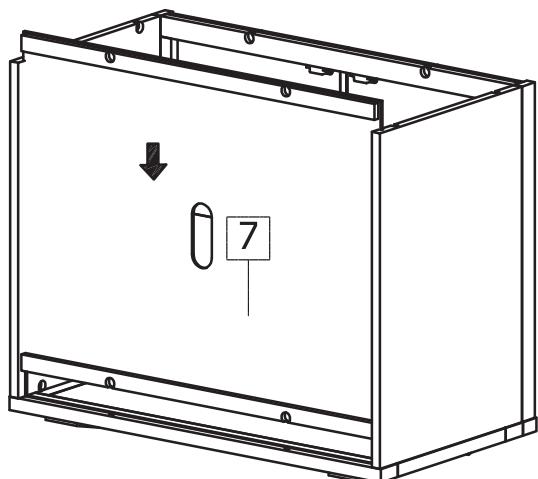


Tab in opened position

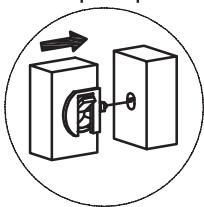

Pull tab down to lock

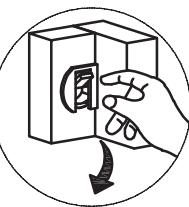


Tab in locked position

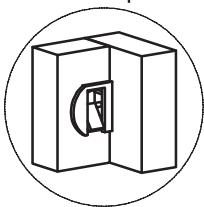


Step:04


- Line up all the locking tabs in the open position
- With two people, carefully align the top in place making sure that the tab fits into the receiver portion on the top. Once firmly in place, lock the tabs.

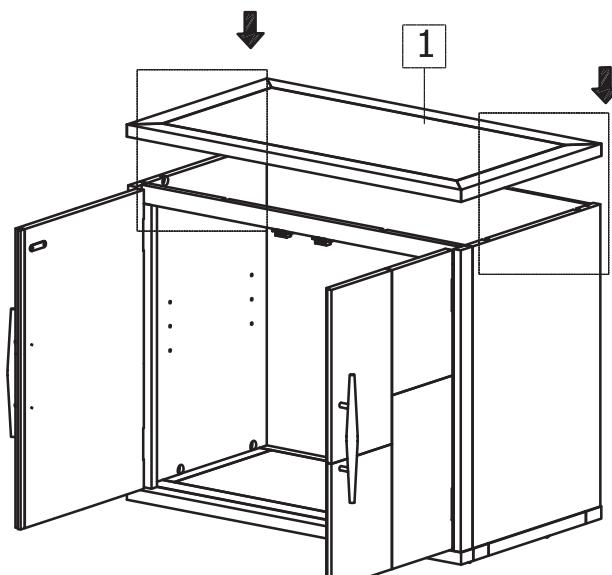


Tab in opened position

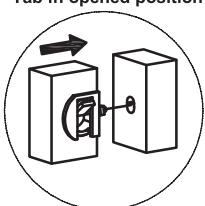

Pull tab down to lock

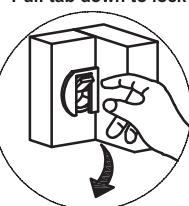

Tab in locked position

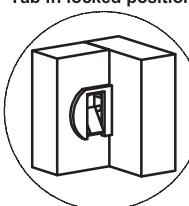





LIVIN HILL

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 2297 - 33KD

COLHANE 2 DOOR ACCENT CABINET WASH FINISH





Step:05

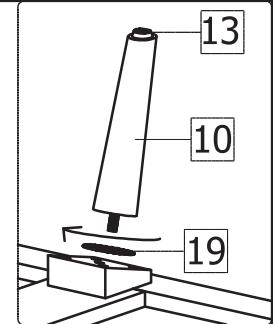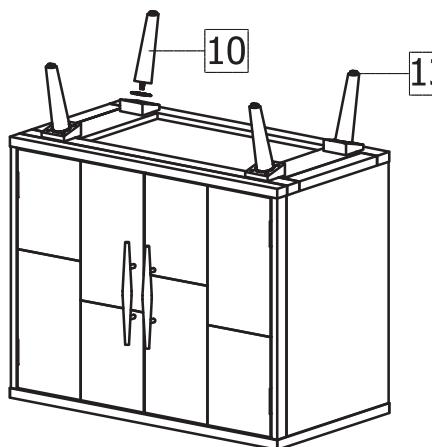

- With two people carefully place the cabinet on a flat surface to prevent scratches.
- Proceed to put the plastic temple on the legs and attach the legs to the cabinet, rotate the legs clockwise until you feel heavy and align the legs so that they are in the right direction with the product.

Step:06

- Install the shelves using the shelf pins. it is important to secure the shelf in place with the wood screws (See Diagram)
- Attach the door pull with a Phillips screwdriver as shown.

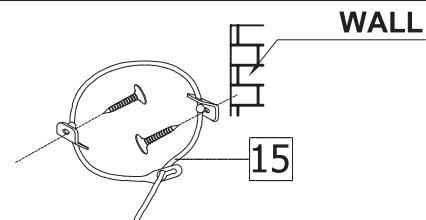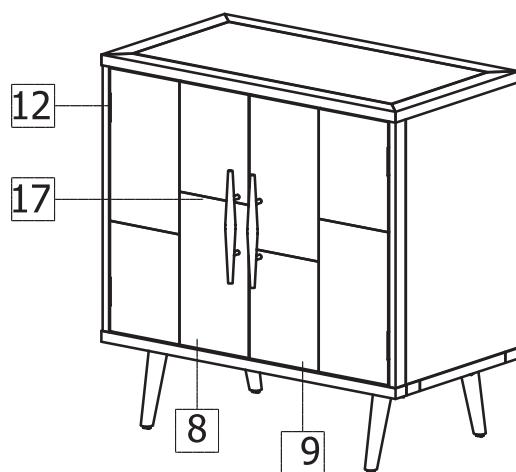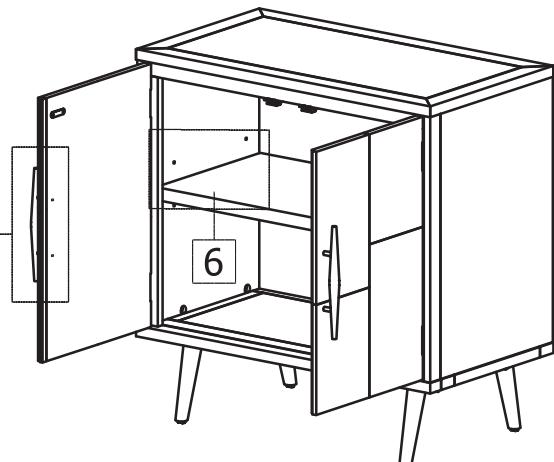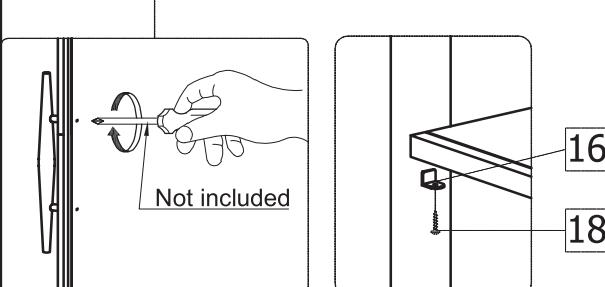

PLEASE NOTE :

To help prevent the possibility of tip-over, install the ANTI-TIP OVER restraint provided.