

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION

MODEL # 2294 - 65KD

ARCHDALE 4 DOOR ACCENT CABINET

GREY FINISH

Parts key


No	Code	Qty	Description	No	Code	Qty	Description
1	2294-65KDP54	1 pc	Top	8	2294-65KDP38S	2 pcs	Back Panel
2	2294-65KDP51B	1 pc	Bottom Shelf	9	2294-65KDP07L	2 pcs	Left Side Facing End Door
3	2294-65KDP53	1 pc	Front Frame				
4	2294-65KDP51L	1 pc	Left Side Facing Side Panel	10	2294-65KDP07R	2 pcs	Right Side Facing End Door
5	2294-65KDP51R	1 pc	Right Side Facing Side Panel	11	2294KDP51H	6 pcs	Side Panel Hinge
				12	2294KDP07H	8 pcs	Door Hinge
6	2294-65KDP08V	1 pc	Vertical Partition	13	2294KDP01L	3 pcs	Leveler
7	2294-65KDP08S	2 pcs	Shelf	14	2294KDP01D	2 pcs	Door Catch
				15	2294KDP02M	1 pc	Middle leg
				16	2294KDP01AT	1 set	Anti-Tip Kit

Hardware Kit 2293-65KDP01

No	Code	Qty	Description	No	Code	Qty	Description
17	2294KDP08P	8 pcs	Shelf Pin	19	2294KDP01S	8 pcs	Wood Screw
18	2294KDP04	4 pcs	Handle w/ Screw	20	2294KDP01WD	2 pcs	Wood Dowel

PLEASE NOTE: Assembly requires two people. Follow directions step by step.


Step:01

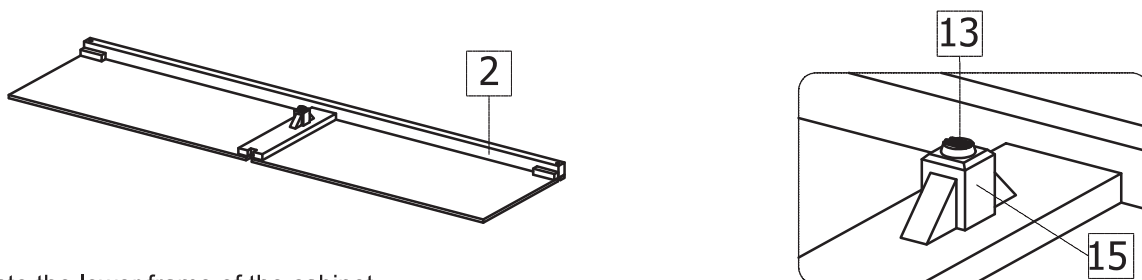

- The middle leg is set up into the lower frame of the cabinet.

Step:02

- With the help of the second person, open the front frame assembly positioning the two side panels of the cabinet 90° perpendicular to the cabinet frame.

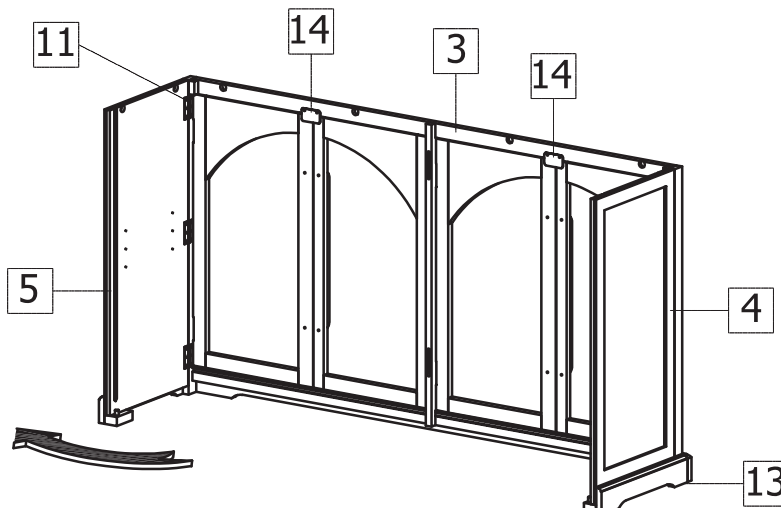



LIVIN HILL


ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION

MODEL # 2294 - 65KD

ARCHDALE 4 DOOR ACCENT CABINET GREY FINISH

Step:03




- Insert the wood dowels into the rear leg support

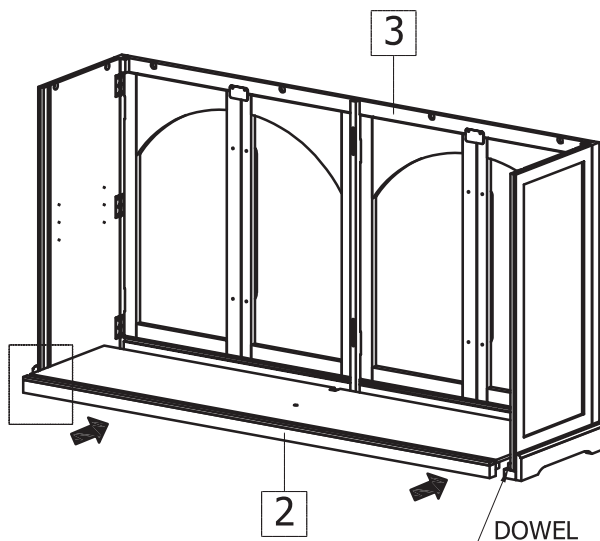


- Place the bottom shelf in position and lock the wood dowels into the receiving holes in the rear leg.

Step:04


- Insert the Vertical Partition by placing the tab on the panel into the receiver on the Front Frame and gently push down to lock into place. Make sure that the locking tab is in the opened position to insert into the bottom shelf.

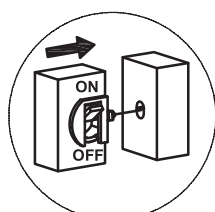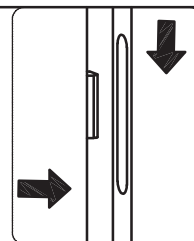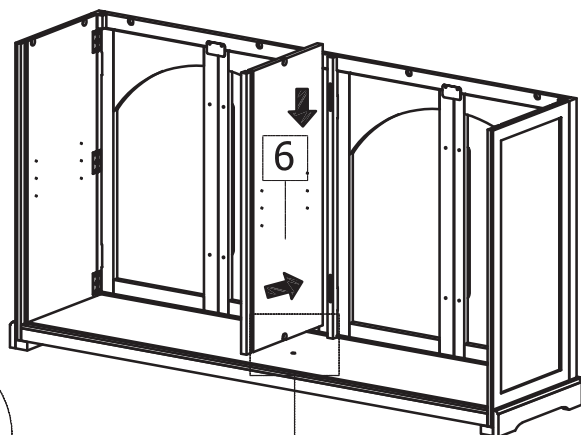

Tab in opened position

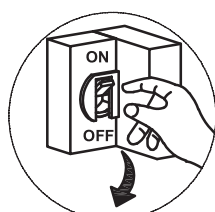

Pull tab down to lock

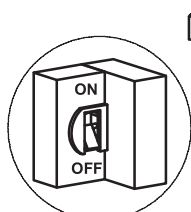


Tab in locked position

- Lock the tab (see diagram below) to secure the vertical panel to the bottom shelf


Step:05

- Carefully insert the back panels into place making sure that the lock tabs are in the open position on the bottom of the back panel.

- Once in place, lock the tabs on the bottom.

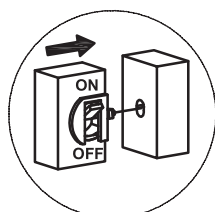


Tab in opened position

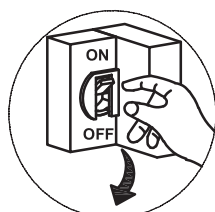

Pull tab down to lock



Tab in locked position

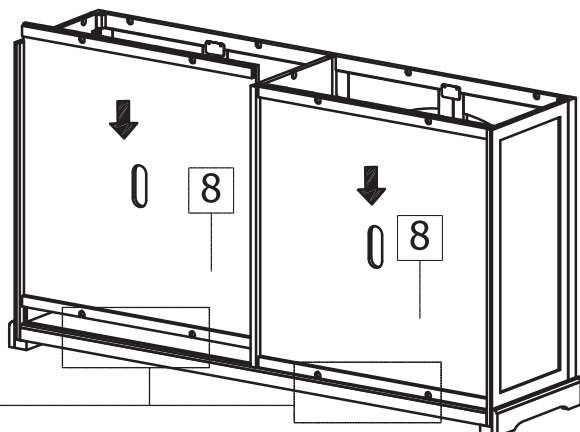



LIVIN HILL


ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION

MODEL # 2294 - 65KD


ARCHDALE 4 DOOR ACCENT CABINET GREY FINISH

Step:06

- Line up all the locking tabs in the open position
- With two people, carefully align the top in place making sure that the tab fits into the receiver portion on the top. Once firmly in place, lock the tabs.




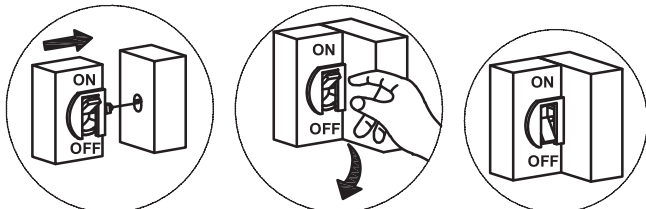


Tab in opened position Pull tab down to lock Tab in locked position

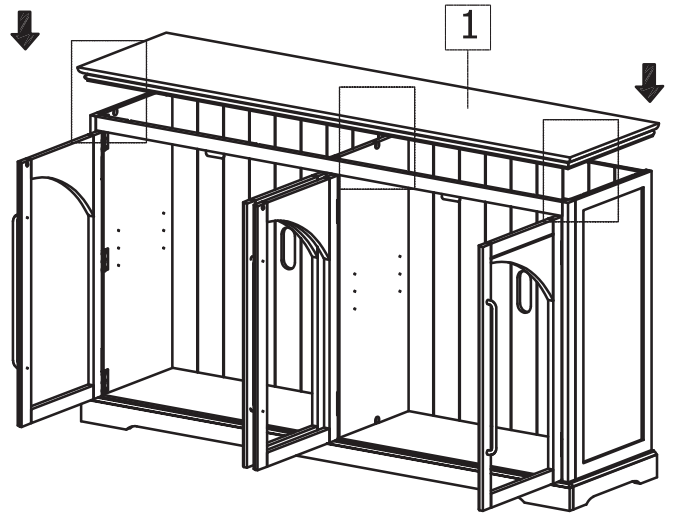

Step:07

- Install the shelves using the shelf pins. it is important to secure the shelf in place with the wood screws (See Diagram)
- Attach the door pull with a Phillips screwdriver as shown.

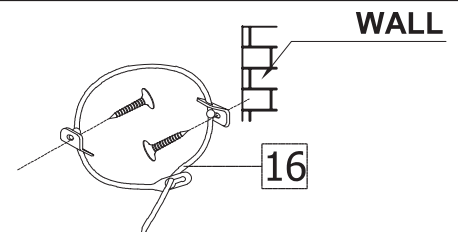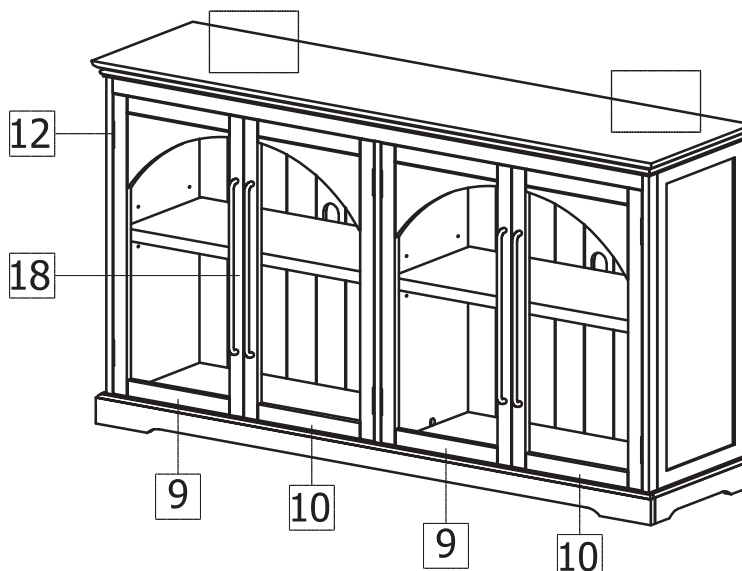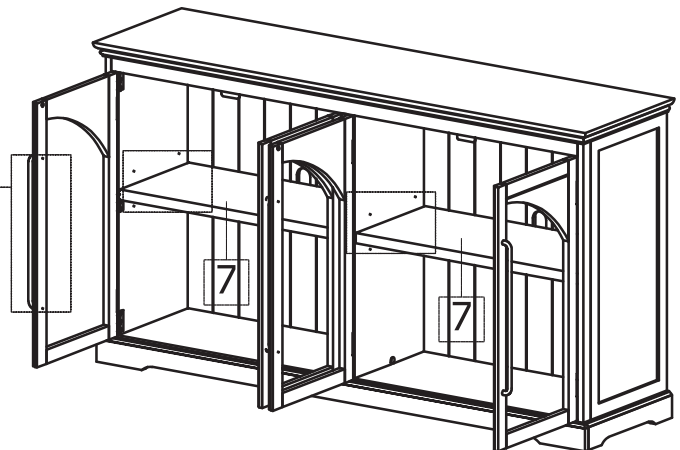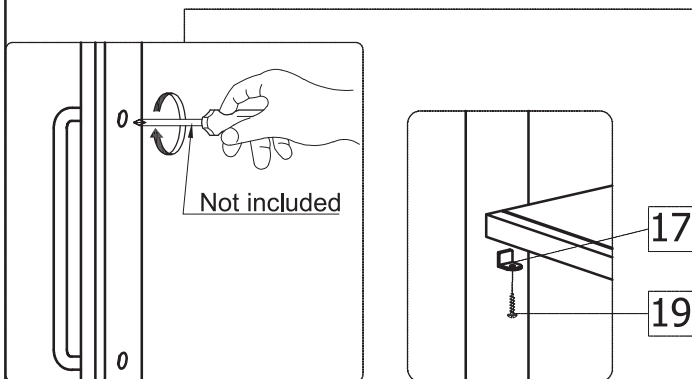

PLEASE NOTE :

To help prevent the possibility of tip-over, install the ANTI-TIP OVER restraint provided.