

## ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 2251 - 38


### ISABELLA 2 DOORS ACCENT CABINET WHITE FINISH

Parts key							
No	Code	Qty	Description	No	Code	Qty	Description
1	2251-38P54	1 pc	Тор	8	2251-38P07L	1 pc	Left Side Facing Door
2	2251-38P51B	1 pc	Bottom Shelf	9	2251-38P07R	1 pc	Right Side Facing Door
3	2251-38P53	1 pc	Front Frame	10	2251P51H	4 pcs	Side Panel Hinge
4	2251-38P51L	1 pc	Left Side Facing Side Panel	11	2251P07H	4 pcs	Door Hinge
5	2251-38P51R	1 pc	Right Side Facing Side Panel	12	2251P01L	4 pcs	Leveler
6	2251-38P08	1 pc	Shelf	13	2251P01D	1 pc	Door Catch
7	2251-38P38	1 pc	Back Panel	14	2251P01AT	1 set	Anti-Tip Kit
Hardware Kit 2251-38P01							
No	Code	Qty	Description	No	Code	Qty	Description
15	2251P08P	4 pcs	Shelf Pin	17	2251P01S	4 pcs	Wood Screw
16	2251P04	2 pcs	Knob w/ Screw				

PLEASE NOTE: Assembly requires two people. Follow directions step by step.

#### Step:01


- With the help of the second person, open the front frame assembly positioning the two side panels of the cabinet  $90^{\circ}$  perpendicular to the cabinet frame.

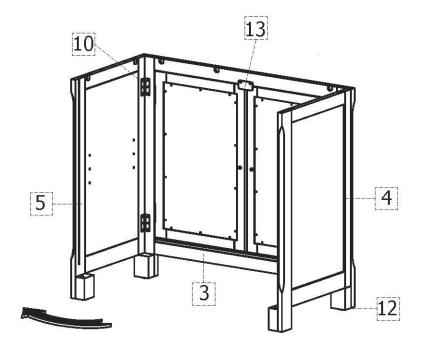

MADE IN VIET NAM 1/3




#### **ASSEMBLY INSTRUCTIONS &** PARTS IDENTIFICATION LIVIN HILL MODEL # 2251 - 38 ISABELLA 2 DOORS ACCENT CABINET WHITE FINISH

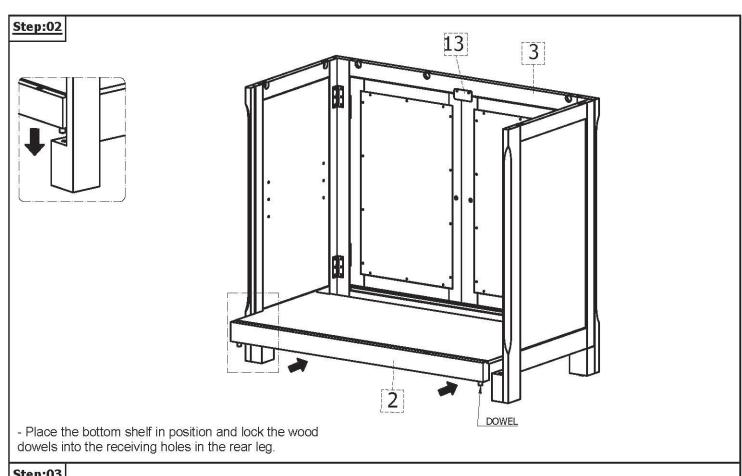

#### Step:03

- Carefully insert the back panels into place making sure that the lock tabs are in the open position on the bottom of the back panel.
- Once in place, lock the tabs on the bottom.

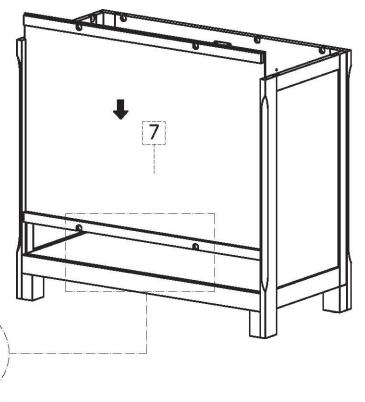










# ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 2251 - 38 ISABELLA 2 DOORS ACCENT CABINET WHITE FINISH

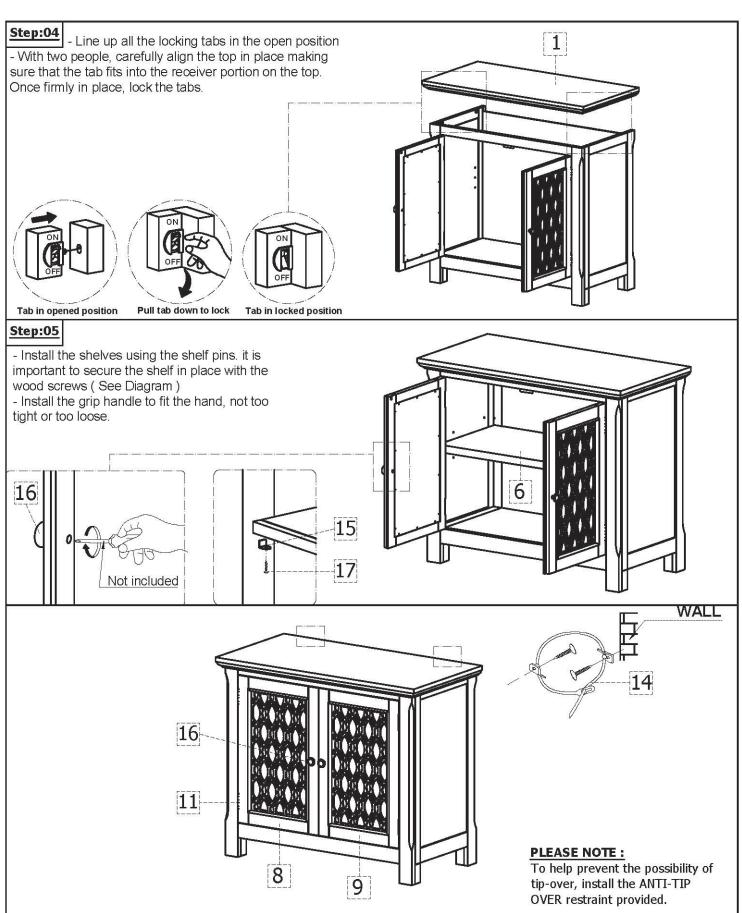

MADE IN VIET NAM

3/3