

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION


MODEL # 2252 - 38 ISABELLA 2 DOORS ACCENT CABINET BLUE FINISH

| | | | Part | s key | , | | |
|----|-------------|-------|------------------------------|-------|-------------|-------|------------------------|
| No | Code | Qty | Description | No | Code | Qty | Description |
| 1 | 2252-38P54 | 1 pc | Тор | 8 | 2252-38P07L | 1 pc | Left Side Facing Door |
| 2 | 2252-38P51B | 1 pc | Bottom Shelf | 9 | 2252-38P07R | 1 pc | Right Side Facing Door |
| 3 | 2252-38P53 | 1 pc | Front Frame | 10 | 2252P51H | 4 pcs | Side Panel Hinge |
| 4 | 2252-38P51L | 1 pc | Left Side Facing Side Panel | 11 | 2252P07H | 4 pcs | Door Hinge |
| 5 | 2252-38P51R | 1 pc | Right Side Facing Side Panel | 12 | 2252P01L | 4 pcs | Leveler |
| 6 | 2252-38P08 | 1 pc | Shelf | 13 | 2252P01D | 1 pc | Door Catch |
| 7 | 2252-38P38 | 1 pc | Back Panel | 14 | 2252P01AT | 1 set | Anti-Tip Kit |
| | | -3! | Hardware Kit | 2252 | -38P01 | 3. | I. |
| No | Code | Qty | Description | No | Code | Qty | Description |
| 15 | 2252P08P | 4 pcs | Shelf Pin | 17 | 2252P01S | 4 pcs | Wood Screw |
| 16 | 2252P04 | 2 pcs | Knob w/ Screw | | | | |

PLEASE NOTE: Assembly requires two people. Follow directions step by step.

Step:01

- With the help of the second person, open the front frame assembly positioning the two side panels of the cabinet 90° perpendicular to the cabinet frame.

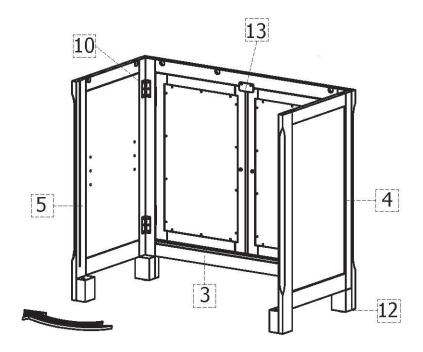


MADE IN VIET NAM

1/3




ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION HILL MODEL # 2252 - 38 ISABELLA 2 DOORS ACCENT CABINET **BLUE FINISH**

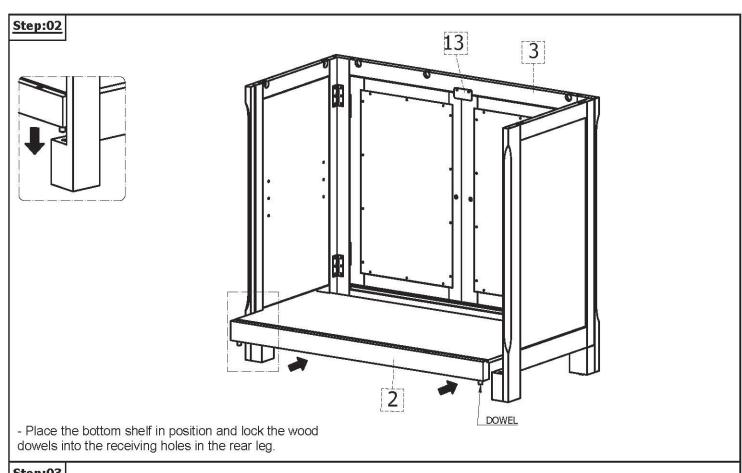

Step:03

- Carefully insert the back panels into place making sure that the lock tabs are in the open position on the bottom of the back panel.

- Once in place, lock the tabs on the bottom.

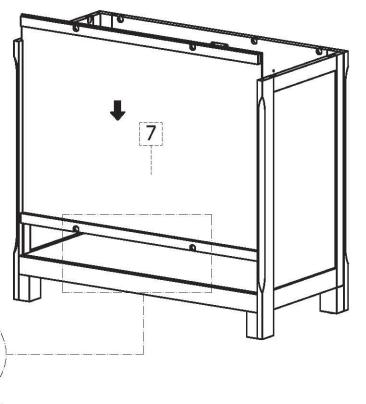








Tab in locked position



ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION

MODEL # 2252 - 38

ISABELLA 2 DOORS ACCENT CABINET BLUE FINISH

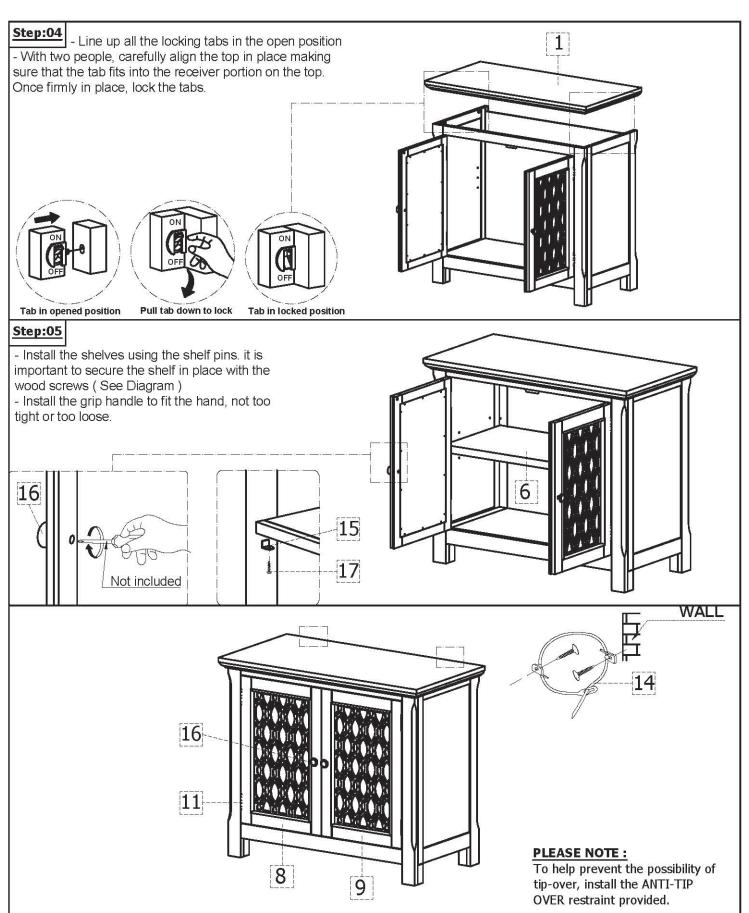

MADE IN VIET NAM 3/3